

Symbol	ENGLISH	DEUTSH
BW	TEMPERATURE LIMITER	TEMPERATURWACHER
GS	BOTTOM HEATER SPECIAL	SPEZIAL HEIZKORPER
GG	TOP HEATER	OBERHITZE
GD	BOTTOM HEATER	UNTERHITZE
GO	TOASTER HEATER	GRILL HEIZKORPER
GW	HEATER OF THERMAL CIRCULATION	HEISSLUFTHEIZKORPER
LZ	IGNITER SWITCH	ZUNDSCHALTER
LO	COOKING OVEN LIGHTING SWITCH	SCHALTER FUR BACKOFENI
LR	GRILL SWITCH	GRILLSCHALTER
LP	OVEN SWITCH	BACKOFENSCHALTER
LI -L4	HOTPLATE SWITCH	7-TAKTSCHALTER
NW	THERMAL FAN	HEISSLUFTMOTOR
NR	ROASTING-SPIT DRIVE	GRILLMOTOR
NC	COOLING FAN	KUHLGEBLASER
OR	OVEN LAMP	BELEUCHTUNGRESISTOR
OP	BACKING OVEN LAMP	BACKOFENBELEUCHTUNG
PI -P4	HEATING PLATE	KOCHPLATTE
RT	TEMPERATURE CONTROLLER	THERMOSTAT
SP	SIGNALLING LIGHT YELLOW	SIGNALLEUCHTE
SC	SIGNALLING LIGHT RED	SIGNALLEUCHTE
SZ	SIGNALLING LIGHT GREEN	SIGNALLEUCHTE GRUN
SW	RESIDUAL HEAT INDICATOR	RESTWARMEANZEIGE
T, Te, Tf, Tc	CONTROL PROGRAMER	TEIMER
Tps	SENSOR PANEL	SENSOR PANEL
WN	IGNITER GENERATOR	ZUNDGENERATOR
XZ	CONNECTION TERMINAL	KLEMMLEISTE
XB..	PLUG	STECKER
XA..	SOCKET	STECKDOSE
Z...	EARTH CONDUCTOR	SCHUTZLEITUNG
RG	TEMPERATURE PROBE	SPEISETERMOMETER
RC	TEMPERATURE SENSOR	TEMPERATURSENSOR
(PL)	FRONT LEFT	YORNE LINKS
(TL)	BACK LEFT	HINTEN LINKS
(TP)	BACK RIGHT	HINTEN RECHTS
(PP)	FRONT RIGHT	VORNE RECHTS
(BP)	RIGHT SIDE	RECHTS